

RT-A8 Retrofit Troffer Series INSTALLATION INSTRUCTIONS for all RT-A8 Series Products




WARNING **RISK OF ELECTRICAL SHOCK** **IMPORTANT SAFEGUARDS**

READ AND FOLLOW ALL SAFETY INSTRUCTIONS.


To ensure safety and rated lifespan, this product must be installed according to these instructions by qualified electrician only. Do not use this equipment for other than the intended use.




1. Turn off power and remove original cover.

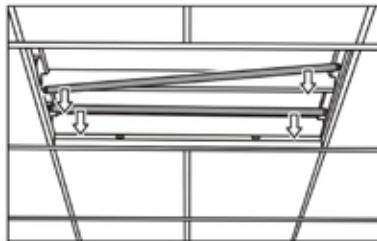


2. Remove existing tubes. Dispose of tubes properly.

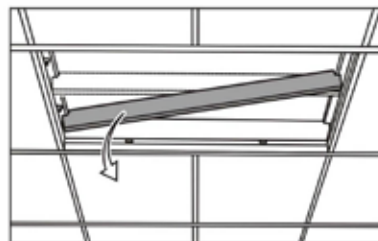


3. Remove ballast cover. If remaining troffer height is limited, remove original ballast.

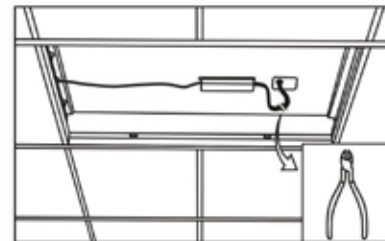


4. Disconnect ballast power wires from main AC feed.

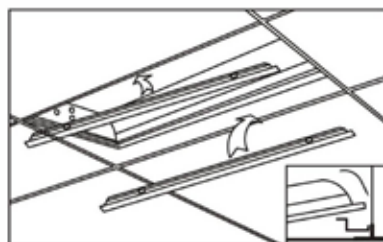


5. Install and secure latches.

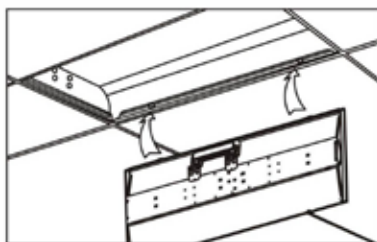


6. Install the retrofit unit to the original troffer and leave unit in open position.

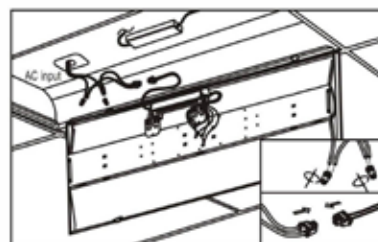

7. Connect all wires to AC circuit per color codes.

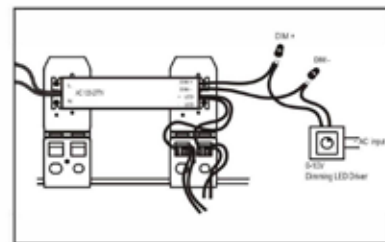

8. For optional dimming control, connect dimming wires.

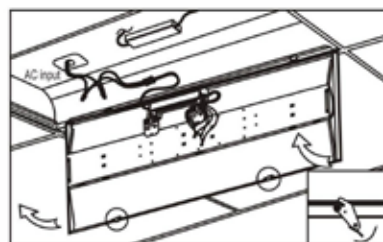

9. Close unit and secure latches. Turn on power.



WARNING:

Risk of fire. Turn off power before installation.

Risk of electric shock. Installation should be performed by qualified electrician only.

Original fixture (luminaire) cannot be used with intended lamp after this retrofit installation.

The product is for use indoors in dry or damp location only.

If this product exhibits irregular operation (buzzing, flicker, detectable heat or odor) turn off power immediately and contact a qualified electrician.